SCANSONIC
P4000

UK User Manual

Contents

02 CONTENTS
03 INFORMATION
04 FRONT AND REAR PANEL OVERVIEW
06 CONNECTING YOUR RADIO
06 OPERATING YOUR RADIO – DAB
07 SELECTING A STATION – DAB
07 INFORMATION SERVICES – DAB
08 OPERATING YOUR RADIO – FM
08 DISPLAY MODES – FM
08 AUX MODE, CONNECT YOUR IPOD
09 MANUAL CLOCK SETTING
09 SETTING THE ALARM
09 SLEEP TIMER
10 SNOOZE SETTING, EQ SETTING
10 CONTRAST SETTING, RESETING THE RADIO
11 SPECIFICATION

Information

Congratulations on your new radio.
Please take a moment to read this manual
Enjoy.

Safety Instructions.

Please store this instruction manual for future reference.

- Place the unit on a solid surface
- Do not expose Scansonic P4000 to high humidity, direct sunlight, dirt, heavy vibration or extreme temperatures.
- Do not open the cabinet. Only qualified technicians are allowed to handle this Scansonic radios internal parts.
- If service or repair is required, this must also be done by qualified technicians.
- User a duster or a slightly damp, soft and Non-fluffy rag to clean the cabinet, Do not use corrosive or strong cleaning agents.
- Make sure no liquids or moisture penetrates the radio during cleaning. Unplug the radio before cleaning it.

Unplug the radio in following cases;
- Foreign objects or liquids has penetrated the radio
- The radio cannot be operated properly.
- The cabinet has been damaged.
- The mains plug or the mains cable is defective
- If the radio is not to be used for a longtime.

Disclaimer
Despite our best efforts we cannot guarantee that the technical data indicated are correct, complete and updated, We, Scansonic, reserve the right to make technical changes without prior notice.

Front panel

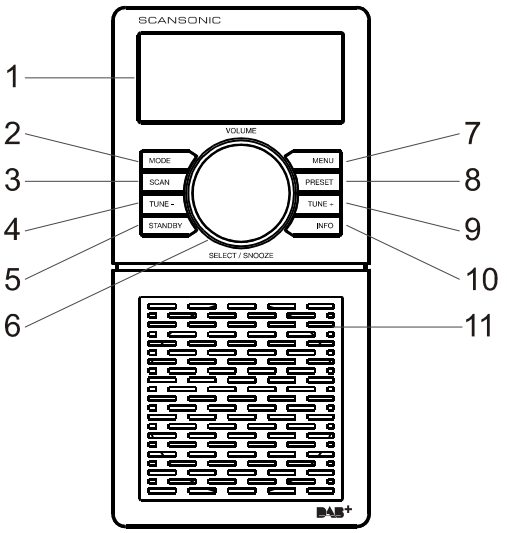

Rear panel

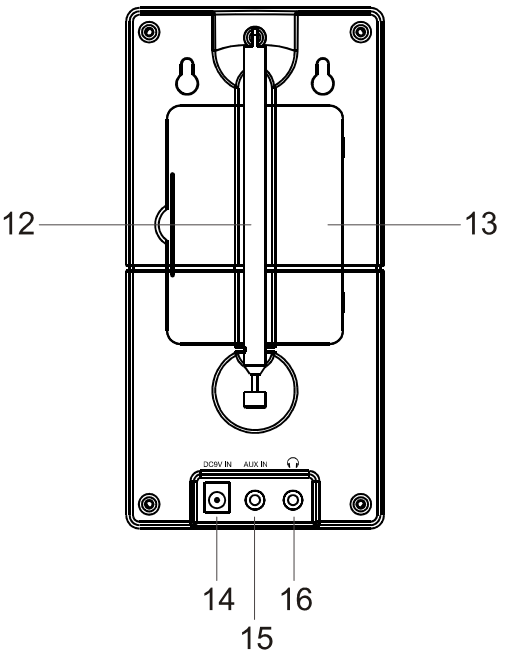

01 Display	OLED display showing all information on the radio.
02 MODE	Press to select DAB radio, FM radio or AUX input.
03 SCAN	Press to Scan radio channels.
04 TUNE	Press to scan radio downwards.
05 STANDBY	Press to go to STANDBY mode, Press Longer to Shut down radio.
06 ROTARY	Volume Control / SELECT / SNOOZE-Taste
07 MENU	Press to setup System Utilities / EQ / Alarm / Clock / Contrast etc.
08 PRESET	Press to preset radio stations 1- 10.
09 TUNE +	Press to scan radio upwards.
10 INFO	Press to retrieve information from Radio Stations.
11 SPEAKER	3” Full range loudspeaker
12 ANTENNA	The radio comes with a telescopic antenna. To Improve FM reception, adjust the antenna for best reception.
13 BATTERY	This radio can also be played with batteries (AA size x 6).
14 DC9V IN	Use this input to to the enclosed DC Power supply.
15 AUX IN	Connect a stereo or mono audio source (iPod, iPhone, iPad, MP3 Player, TV etc). Use 3.5mm jack enclosed to connect to devices.
16 HEADPHONE	Connect a separate stereo headset to this input to listen to the radio. Connecting headset will disable the main speaker.

Connecting your radio

01 Your radio is supplied with a Mains Adaptor.
02 Place your radio on a flat surface.
03 Insert the adaptor plug into the DC socket on the back of your radio.
04 Plug the adaptor into the 230 volts mains socket outlet.

Important:
The AC adaptor should be disconnected from the mains supply and the radio when not in use. The mains adaptor is used as the means of connecting the radio to the mains supply, do not connect the radio to the mains outlet socket in any other way.

Operating your radio – DAB

01 Carefully extend the telescopic antenna.
02 Press the STANDBY button to switch on radio, the display will show “SCANSONIC” and the radio will come into DAB mode automatically.
03 First time the radio is used a QUICK SCAN will be carried out,
if the radio has been and turned back ON from STANDBY mode, the last used station will be selected.
04 For a full SCAN please press “SCAN” button for 2 seconds.
05 When scanning is completed the display shall indicate the number of found stations.
06 You may PRESET your favorite stations by pressing PRESET button and scroll to the position you would like to save and then press SELECT button for 2 seconds.
07 When signal indicator is low is because of weak station signal or bad reception location.
08 If no Stations are found after scanning the display will show NO STATIONS AVAILABLE and it is necessary to relocate the radio to a position with better reception.

Selecting a station – DAB

01 The display show the name of the station selected.
02 Press the TUNE – or TUNE + button to scroll the station list and find the station.
03 Press down ROTARY KNOB to select the desired station.

Information services – DAB

Your radio shall display different info which can be selected by pressing the INFO button.

01	Signal strength	Shows a graph of the signal strength for the selected station.
02	Date	Shows the current date and time.
03	Ensemble	Displays the name of broadcaster of the DAB Station.
04	Genre	Displays the type of the selected station; Pop,Rock,News,Jazz Etc.
05	Data Speed	Display the digital bit rate and mono/ stereo of selected station.
06	Radio text (DLS)	Displays text messages from the station.
07	Station Frequency	Displays the frequency of the selected station.

Operating your radio – FM

01 Carefully extend the telescopic antenna.
02 Press ON/OFF to power on the radio (Use MODE to select to FM).
03 Press TUNE+ button 2 seconds to automatically scan upwards.
04 Press TUNE- button 2 seconds to automatically scan downwards.
05 You may PRESET your favorite stations by pressing PRESET button and scroll to the position you would like to save and then press SELECT button for 2 seconds.

Display modes – FM

Your radio shall display below information by pressing the INFO button.

01	Signal strength	Shows a graph of the signal strength for the selected station.
02	Date	Shows the current date and time.
03	Station Name	Shows the name of the station or the frequency of the station.
04	Audio	Displays Mono or Stereo.
05	Program	displays the name of Program If not available “Prog Type N/A” shall be displayed.
06	Radio text	displays text messages from the station.

Note that these FM display mode information are only available when the radio is able to receive RDS information from the broadcaster.

AUX mode

CONNECT TO YOUR IPOD, IPHONE, IPAD
& OTHER AUDIO SOURCES

The radio has an auxiliary input. This input can be used to connect an external source such as iPod, iPhone, iPad, MP3 Players and other audio sources by using the included 3.5mm mini jack cable.

To connect please connect the 3.5mm mini jack cable to your radio and to your other device.

Press MODE button to select the AUX mode.

Manual clock setting

The radio clock can be set manually as below.

01 Press MENU > Utility > Clock Setup.
02 With Rotary please select Date Setting : YYYY : MM : DD.
03 With Rotary please select Time Setting : HH : MM.

Setting the alarm

The radio alarm allows you to wake up to your desired radio station or a buzz.

01 Press MENU > Utility > Alarm Setup.
02 With Rotary Select Alarm number : 1 or 2.
03 With Rotary Select Alarm Status : ON or OFF.
04 With Rotary Select Alarm mode : Buzz or Radio.
05 With Rotary Select Alarm Time : 00 : 00.
06 Press SELECT Button to end.

Sleep timer

The radio has a sleep timer function that allows your radio to shut off automatically after a selected number of minutes.

01 Press MENU > Utility > Sleep Setup.
02 With Rotary please select Sleep: ON / OFF.
03 With Rotary please select Cound down : 15, 30, 45, 60, 75 or 90 mins.
04 Press SELECT Button to end.

Snooze setting

The radio has a Snooze function that allows your radio to Alarm after a certain number of minutes.

01 Press MENU > Utility > Snooze Setup.
02 With Rotary please select : 5, 10, 15 or 20 mins.
03 Press SELECT button to end.

EQ setting

The radio has a EQ function that allows your radio to play with different Equalizer settings.

01 Press MENU > Setup > EQ Setting.
02 With Rotary please select : Flat, News, Classic, Pop or Rock.
03 Press SELECT button to end.

Contrast Setting

The radio is capable on having different brightness of contrast according to your environment.

01 Press MENU > Setup > Contrast.
02 With Rotary please select : 1/8 ~ 8/8 (Factory Setting is 8/8).

Reseting the radio

If you encounter problems with your radio you may reset the radio to Factory Setting as follows.

01 Press MENU > Setup > Factory Default.
02 Press Select and shall go into “System Reset”.

Specifications

Band (Mode)	DAB,DAB+ & FM & (AUX)
Output Power	5 Watts RMS
Loudspeaker	3” Full Range
Antenna	FM & DAB telescopic
Power / Battery	DC 9V / 6 x AA sized Alkaline Batteries
Inputs	DC 9V Aux Input
Outputs	Headphones
Dimensions	95mm(W) x 100mm(D) x 192mm(H)
Weight (Net)	985 g

SCANSONIC P4000

enjoy

www.scansonic.dk